



ИНСТРУКЦИЯ ПО МОНТАЖУ ABBER Schwarzer Diamant

AG30100B(BH)/AG30110B(BH)/AG30120B(BH)/AG30130B(BH)/AG30140B(BH)/
AG30150B(BH)/AG30170B(BH)/AG30180B(BH)-S70B/S80B/S90B/S100B

НЕОБХОДИМЫЕ ИНСТРУМЕНТЫ



СПИСОК ДЕТАЛЕЙ

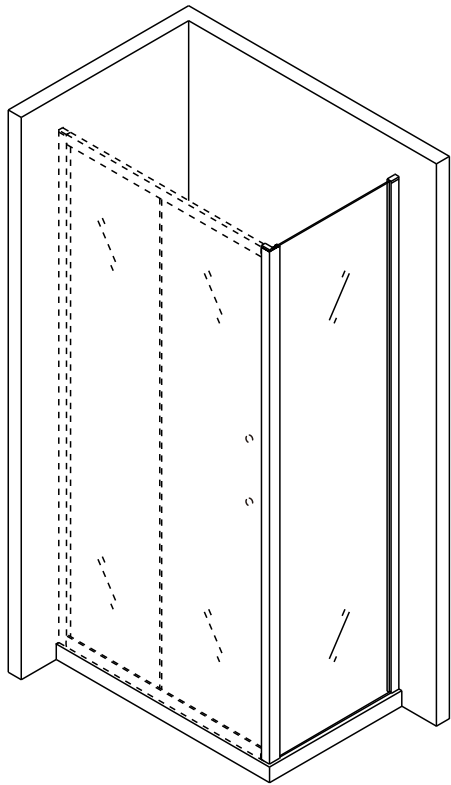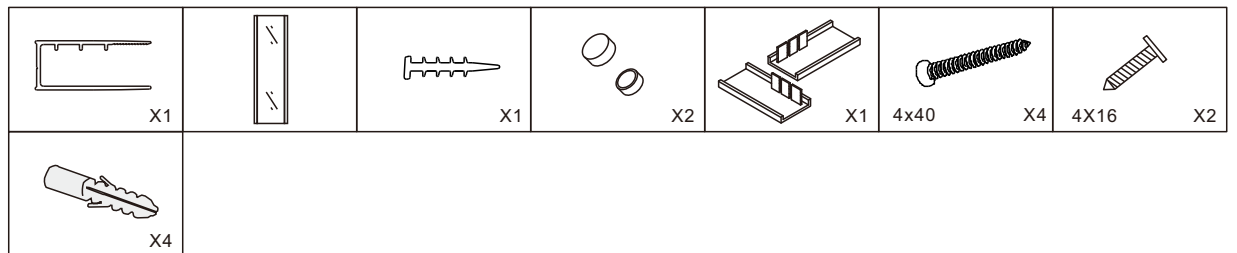

1

РАЗМЕР	A(ММ)
1000	991-1006
1100	1091-1106
1200	1191-1206
1300	1291-1306
1600	1591-1606
1700	1691-1706

РАЗМЕР	B(ММ)
700	685-700
800	785-800
900	885-900

2

3

4

5

6

