


# ИНСТРУКЦИЯ ПО МОНТАЖУ ABBER Schwarzer Diamant

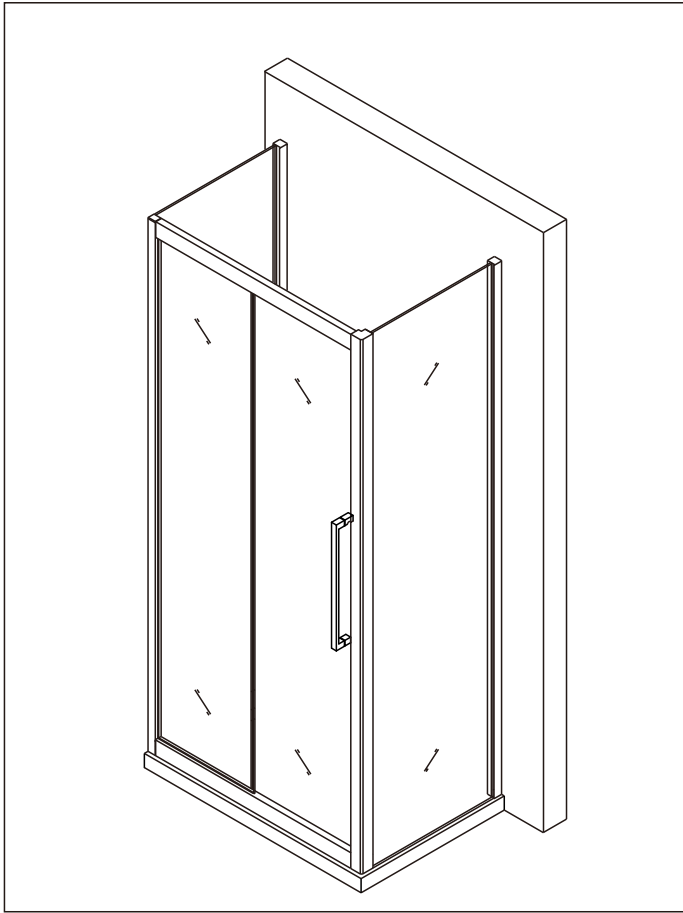

## НЕОБХОДИМЫЕ ИНСТРУМЕНТЫ



## СПИСОК ДЕТАЛЕЙ

X1	X1	X2	X2	X2	X2	X2
X2	X2	X1	X2	X1	X2	X1
4x30 X8	4x30 X8	4x16 X4	4x10 X2	4x12 X2	X2	X1
X4	Ф3.2 X1	X8				

1

A(мм)

РАЗМЕР	A(мм)
1000	991-1006
1100	1091-1106
1200	1191-1206
1300	1291-1306
1600	1591-1606
1700	1691-1706

2

3

4

5

6

